



PREDATOR  
**ELECTRONIC CALL**



# Instruction Manual

FOXPRO Inc. • 14 Fox Hollow Drive • Lewistown, PA 17044 • (717)-248-2507

[www.gofoxpro.com](http://www.gofoxpro.com)

## Important Information

FOXPRO®'s goal is to provide our customers with the highest quality products in the industry. We take great pride in manufacturing our products in the USA. Please do not hesitate to contact us for assistance, comments or questions.

### FOXPRO® Inc.

14 Fox Hollow Drive  
Lewistown, PA 17044

## Hours of Operation

Monday – Friday  
8AM – 5PM EST

## Contact Us

**Customer Service:** (717) 248-2507

**Toll Free Orders Only:** 866-463-6977

**General Inquiry E-mail:** sales@gofoxpro.com

Stay up to date with the latest sounds by visiting our online sound library. Watch for new products and upgrades from FOXPRO®. Visit us online:

[www.gofoxpro.com](http://www.gofoxpro.com)



This manual, the animal sounds stored in your caller, and animal sounds purchased from FOXPRO® Inc. for installation in your caller is protected by copyright.

Publication Date: January 13, 2014

Copyright ©© 2013 by FOXPRO® Inc.

REV7

# Table of Contents

|     |  |    |
|-----|--|----|
| 1.  | Getting Started.....                               | 4  |
| 1-1 | What's in the Box? .....                           | 4  |
| 1-2 | Cabela's Outfitter Series: First Glance.....       | 4  |
| 1-3 | Cabela's Outfitter Series: Requirements.....       | 5  |
| 1-4 | TX35 Remote: First Glance .....                    | 5  |
| 1-5 | TX35 Remote: Requirements .....                    | 6  |
| 2.  | Operating Instructions .....                       | 6  |
| 2-1 | Playing Sounds .....                               | 6  |
| 3.  | Auxiliary Jack Function.....                       | 7  |
| 4.  | External Speakers.....                             | 7  |
| 4-1 | Connecting External Speakers.....                  | 8  |
| 4-2 | Disabling Internal Speakers.....                   | 8  |
| 5.  | Batteries and Charging.....                        | 8  |
| 6.  | Programming Sounds.....                            | 10 |
| 6-1 | Obtaining New Sounds.....                          | 10 |
| 6-2 | Programming the Game Call (Windows PC's Only)..... | 11 |
| 6-3 | Transferring a New Playlist to the TX35.....       | 12 |
| 7.  | Troubleshooting.....                               | 13 |
| 8.  | Maximizing Remote Range .....                      | 14 |
| 9.  | FCC & IC Information.....                          | 14 |
| 10. | Warranty Statement .....                           | 16 |

# 1. Getting Started

Congratulations on purchasing the Cabela's Outfitter Series Electronic Predator Call! The Outfitter Series is easy to use, offers a variety of versatile features, and is powered by FOXPRO. Please take the time to read and understand all of the information in this instruction manual. This will ensure that you receive the maximum benefit from the Cabela's Outfitter Series Electronic Predator Call.



**WARNING:** To avoid personal injury and product damage, read all operating instructions and safety precautions in this guide before using the Cabela's Outfitter Series Electronic Predator Call. A digital copy of this manual can be downloaded from:

[http://www.gofoxpro.com/resources/manuals/CAB\\_OUTFITTER.pdf](http://www.gofoxpro.com/resources/manuals/CAB_OUTFITTER.pdf)

## 1-1 What's in the Box?

Included in the box is the following items:

- 1) Cabela's Outfitter Series Electronic Predator Call
- 2) TX35 remote control
- 3) Instruction manual

## 1-2 Cabela's Outfitter Series: First Glance

The graphic on page 5 displays the Cabela's Outfitter Series Electronic Predator Call. Certain aspects of the device are marked with a number that corresponds to the chart shown below. Please take a moment to get familiar with the device.

| Number | Description                         |
|--------|-------------------------------------|
| 1      | Rugged injection molded ABS housing |
| 2      | Rear cone speaker                   |
| 3      | Battery compartment door            |
| 4      | Power knob                          |
| 5      | Internal speaker on/off switches    |
| 6      | Charge Jack                         |
| 7      | Rear external speaker jack          |
| 8      | Auxiliary device jack               |
| 9      | Front external speaker jack         |
| 10     | Pilot lamp / low battery indicator  |
| 11     | Horn speaker                        |



### 1-3 Cabela's Outfitter Series: Requirements


The Cabela's Outfitter Series Electronic Predator Call is shipped without batteries. It requires 8 'AA' batteries. **It is recommended that you use high-quality rechargeable NiMH (nickel metal hydride) batteries for the best performance.** Chapter 5 contains information on batteries and charging.

#### Installing Batteries in the Cabela's Outfitter Series Electronic Predator Call:

1. Access the battery compartment by removing the battery compartment door (located on the back of the game call). The door is secured in place by a thumbscrew. Turn the thumbscrew counterclockwise until the door can be removed.
2. Locate the battery tray. The tray is double-sided and features 4 battery cavities on both sides. The tray is connected to a power wire. You may unplug the power wire to fully remove the tray from the game call while installing batteries.
3. Place the batteries into each battery cavity while observing polarity as indicated.
4. Reconnect the power cable to the tray and slide tray back into the game call.
5. Put the door back in place and secure it by tightening the thumbscrew.

### 1-4 TX35 Remote: First Glance

The following graphic and chart shown below depicts the TX35 remote control. Some elements of the remote are marked with a number that is defined in the chart.

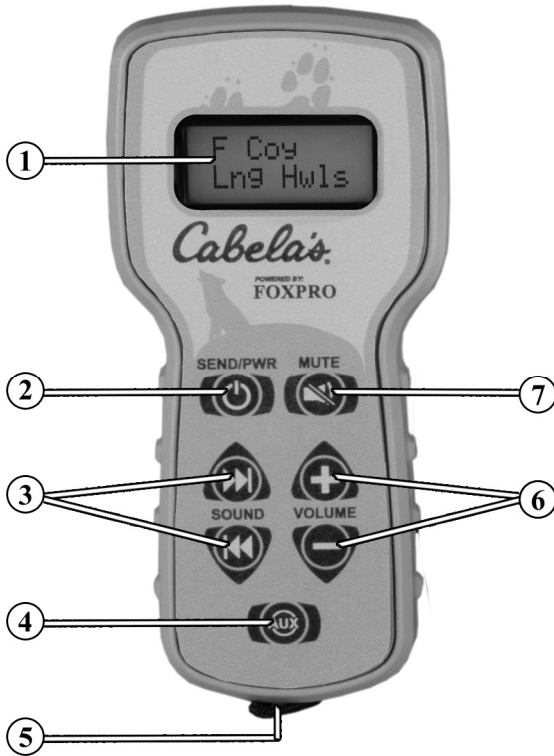

| Number | Description    |
|--------|----------------|
| 1      | LCD panel      |
| 2      | Send/Power     |
| 3      | Sound Up/Down  |
| 4      | Auxiliary      |
| 5      | Lanyard Loop   |
| 6      | Volume Up/Down |
| 7      | Mute           |

## 1-5 TX35 Remote: Requirements

The TX35 remote control operates on a single 9V DC battery. It is recommended that you use a high quality alkaline battery.

### Installing the 9VDC Battery in the TX35 Remote

1. Access the battery compartment by removing the

door from the back of the remote. The door slides down and off of the remote.

2. Attach the 9VDC battery to the power wire in the back of the remote. The battery only connects one way. Make sure that the terminals from the battery wire are properly connected to the terminals on the battery.
3. Slide the battery compartment door back on the remote.

## 2. Operating Instructions

This section covers all sound playback and general operation instructions of the Cabela's Outfitter Series electronic game call and TX35 remote control.

### 2-1 Playing Sounds

Before using the Cabela's Outfitter Series electronic game call and TX35 remote control, make sure that both devices have good batteries installed.

1. Turn on the game call by turning the power switch clockwise to the 'on' position. The green LED will illuminate indicating the power is turned on.
2. Verify that at least one of the speaker selector switches is in the 'on' position.

3. Turn on the TX35 remote control by pushing and holding the send/power button for 1 second. The display will activate and display “SELECT SOUND”.
4. Cycle through the sound list by using the sound selector buttons. Each button press steps through the list one sound at a time. When you find a sound that you wish to play, push the send/power button a single time.
5. In order to hear the sound, you must increase the volume level. You can press the volume up button to increase the volume. The available volume level spans from 0 – 20. By default, the volume is inaudible when you first turn it on.
6. If you wish to mute the sound, push the mute button a single time. To resume playback, push mute a second time.
7. To switch sounds, repeat step number 4.
8. To turn off the game call: move the power switch to the ‘off’ position. To turn off the TX35: push and hold the power/send button for about 4-5 seconds and then release (a message “TURNING OFF” should briefly appear). **Turning off the remote does not result in termination of sound playback on the game call.** You can mute the game call first (step 6) prior to powering down.

### 3. Auxiliary Jack Function

The Cabela’s Outfitter Series Electronic Predator Call is equipped with an auxiliary jack labeled “AUX”. The purpose of this jack is to allow for the connection of certain external devices, such as the FOXPRO® FOXJACK or Jack-Attack Decoy and to be able to turn these on and off with the TX35 remote control transmitter. However, there are some strict electrical limits involved with this jack. If these limits are exceeded, damage to your Cabela’s Outfitter Series Electronic Predator Call will result. This damage is not covered by the warranty.

The electrically inclined will want to know that the jack is connected to the drain of an internal Field Effect Transistor with a maximum current rating of 10mA. The “tip” polarity of the 3.5mm jack is positive, while the sleeve is negative. If the external device is connected with the polarity reversed, an internal protection diode within the FET will conduct, causing the device to stay on constantly. The maximum voltage applied to this jack must never exceed 15 volts. Typical uses for this jack would be to control the FOXPRO® FOXJACK or Jack-Attack Decoy. Instructions on connecting various devices to the “AUX” jack are beyond the scope of this manual. You are urged to seek help from a knowledgeable professional before connecting any unapproved device to this jack. Remember that damage to your Cabela’s Outfitter Series Electronic Predator Call caused by improper use of the “AUX” jack is not covered by the warranty, nor will FOXPRO® be liable for damage to any device connected to this jack.

### 4. External Speakers

The Cabela’s Outfitter Series Electronic Predator Call is equipped with two external speaker jacks which allows you to connect up to two additional speakers. The internal speakers perform

admirably; however, you may encounter situations that require higher volume levels. By connecting a larger and more efficient external speaker(s) to the Cabela's Outfitter Series Electronic Predator Call, the volume level can be increased significantly.

## 4-1 Connecting External Speakers

The external speaker jacks on your Cabela's Outfitter Series Electronic Predator Call accept standard 3.5mm plugs. When choosing an external speaker it is recommended to use one with an impedance rating of 8-ohms.

**NOTE: Be sure the Cabela's Outfitter Series Electronic Predator Call is turned OFF before connecting an external speaker!**

To connect an external speaker: plug the connector of the external speaker into one of the external speaker jacks. You will notice that each external speaker jack corresponds with one of the internal speakers. For example, internal front speaker and front external speaker are linked together. If you wish to have ONLY the external speaker(s) produce sound, you must disable the internal speakers as the internal speakers are not disabled automatically.

## 4-2 Disabling Internal Speakers

Move the speaker slide switch to the "OFF" position for the desired speaker you wish to disable. To re-enable the speaker later, simply place the slide switch back to the "ON" position. By disabling the internal speaker(s) when using an external speaker(s), battery life will be extended longer than having all of the speakers operating at once.

# 5. Batteries and Charging

Your Cabela's Outfitter Series Electronic Predator Call operates on 8 'AA' batteries. For optimal performance and run times, we recommend the use of high-capacity 2000 mAh or greater NiMH (Nickel Metal Hydride) rechargeable batteries rather than alkaline types. You can find a compatible charging system for your Cabela's Outfitter Series Electronic Predator Call online at: <http://www.gofoxpro.com>

When you ask the caller to play at extremely loud volume levels, the current demand on the batteries is much more than alkaline cells can deliver. Consequently, the run time of these batteries can be very short. The Zinc Carbon so-called "Heavy Duty" cells are expressly not recommended. The performance of your caller will be much better with high-capacity NiMH batteries.

On the front of your Cabela's Outfitter Series Electronic Predator Call, locate the green LED. This is your pilot lamp/low power indicator. When this light begins to blink during operation, it is alerting you that the batteries need replaced or recharged. If the batteries drop too low to power the caller, it will shut itself off. Battery run time is directly related to how loud you operate the caller. Using both speakers at the same time rather than only the most appropriate one will have a negative impact on run time. With one speaker playing, expect run times of 6 –



15 hours. With both speakers playing, expect 3 – 10 hours. Remember that very loud volumes are rarely needed, as animals hear much better than we do.



## WARNING

**Never attempt to charge batteries that are not intended to be recharged!** This includes both Zinc Carbon and alkaline cells. The resulting damage can be serious and will not be covered by the warranty. For maximum charge efficiency, we recommend charging your Cabela's Outfitter Series Electronic Predator Call in temperatures ranging from 40°F to 85°F (5°C to 30°C).



## WARNING

**Do not mix battery types!** For example: never use NiMH rechargeable batteries in conjunction with non-rechargeable alkaline batteries.



## WARNING

**Never connect your Cabela's Outfitter Series Electronic Predator Call to an unregulated 12V system (i.e. automotive systems, high current power supplies, etc.)** Serious damage will occur which is not covered by the warranty. The charge jack is intended only for FOXPRO® chargers.



## WARNING

**Never attach an unapproved or a non-FOXPRO® charger to your Cabela's Outfitter Series Electronic Predator Call!** Damages caused by plugging unapproved charging devices into your game call will not be covered by warranty.

## GENERAL PRECAUTIONS FOR CHARGING

Disconnect any/all accessory devices that may be attached to the Cabela's Outfitter Series Electronic Predator Call prior to charging. This includes external speakers, auxiliary devices, and USB cables.

Make sure that the rechargeable battery pack is properly installed in the Cabela's Outfitter Series Electronic Predator Call.

Connect the approved FOXPRO charger to the charge jack on the Cabela's Outfitter Series Electronic Predator Call and attach the transformer to the appropriate outlet.

Follow the included instructions for the particular FOXPRO charger that you are using.

## CHARGING RECOMMENDATIONS

Remember that NiMH batteries self-discharge about 1% per day.

Do not leave charging batteries unattended.

Remove batteries from battery holder when caller will not be used for prolonged periods to help prevent deep discharge.

Recharge your batteries periodically—even when not in use—to prevent deep discharge.



## WARNING

While charging your Cabela's Outfitter Series Electronic Predator Call, the green LED will illuminate. This LED is NOT an indicator for a full charge status. This LED will remain turned-on during the entire charging cycle.

## 6. Programming Sounds

Programming your game call can be done from home with the use of a PC or Mac computer, or by sending the game call to the factory. In order to program the Cabela's Outfitter Series Electronic Predator Call from home, you will need the following items:

1. USB A/B printer-style cable
2. Windows based PC running Windows XP, Windows Vista, Windows 7, or Windows 8. If using a Mac, make sure you are running Mac OS 10 or higher.

For detailed programming guides, please visit the FOXPRO website. Mac users can find a detailed instruction set at the following address:

<http://www.gofoxpro.com/site/resources/mac-programming>

All other programming guides can be found at the following address:

<http://www.gofoxpro.com/site/resources/programming-support>

### 6-1 Obtaining New Sounds

You can access FOXPRO's website any time to purchase new sounds to program in your game call. The website is located at: <http://www.gofoxpro.com>

From the website, access the "FOXPRO Sounds" option from the main menu and click on one of the sound pack options. You can purchase 4 sounds of your choice, 8 sounds of your choice, and 16 sounds of your choice. Consult the programming link listed at the beginning of this section for more details on purchasing, downloading, and installing new sounds from the website.

The Cabela's Outfitter Series Electronic Predator Call is also capable of playing MP3, uncompressed WAV, OGG, and FLAC files obtained from other sources. The maximum number of sounds that your Cabela's Outfitter Series Electronic Predator Call can hold at one time is 35.

## **6-2 Programming the Game Call (Windows PC's Only)**

The first step is to download and install the FOXPRO Sound Programming Utility. The installer for the FOXPRO Sound Programming Utility can be downloaded directly from our website at any time by visiting the following web address: <http://www.gofoxpro.com/programmer>

When the page is loaded, locate the "Product Information" box. This box displays current version number, publication date, and MD5 and SHA1 information for validating the installation file as being genuine. The last item in the box contains the official download link. To begin the download, click on the "Download" button.

If you are upgrading from a previous version of the FOXPRO Programming Utility, there is no need to uninstall the original version before launching the new installer as it will be automatically upgraded. Your original sound library storage folder will remain unchanged.

Depending upon what internet browser you are using, you may be prompted to "Open", "Run", or "Save" the file that is being requested. Some browsers may not prompt you for action and just save the file to your default Download folder. If you are presented the option, we recommend selecting either "Open" or "Run"—in doing this, the installer will automatically launch when the file has been downloaded. Otherwise, you will need to browse your Download folder for the install file which is titled: "foxpro-programming-utility-installer.exe". You will then need to open the file to launch the installer. The installation is very brief and straightforward. When the installation is complete, a message of success will display on the screen.

### **Launching the Utility**

The installer creates a shortcut to launch the programming utility in the Windows Start Menu. The location is: Start Button -> All Programs -> FOXPRO -> FOXPRO Programmer. Click on the "FOXPRO Programmer" icon to launch the utility. Upon successful launch, the main interface will appear.

### **Connecting your Game Call to the PC**

You can now connect the Cabela's Outfitter Series Electronic Predator Call to your PC. The USB port is located inside the battery compartment. You will need to obtain the appropriate USB cable (USB 2.0 printer-style cable) as one is not included with the product. Make sure that the game call is turned off prior to connecting it to your PC.

After connecting the game call to your PC, the utility should recognize the device as being a valid product and display "Connected to..." followed by the device name. The "Caller Sound Files" column should become active and display the sounds currently installed.

### **File Locations / Sound Library**

If you had the previous version of the utility installed, your default sound library storage point is located at "C:\FOXPRO\Sounds". By clicking on the "Browse Library" button you can browse the sound files stored at that location.

If this is a fresh install (no previous versions), your default sound library storage point is located under your Documents (or My Documents) folder\FOXPRO\Sounds. By clicking on the "Browse Library" button, you can browse the sounds stored at that location.

Your sound library will probably be empty by default. You need to obtain sounds and place them into your library folder in order to install them into your FOXPRO game call.

## The Programming Process

1. Turn off the game call.
2. Connect the game call to the PC
3. Launch the programming utility
4. If you do not see your new sounds under the "Source Sound Files" column, use the "Browse Library" button to navigate to the correct location. When the appropriate files are found, double-click on any of the sounds to automatically load all files from that location.
5. Select one, multiple, or all sound files in the "Source Sound Files" column. Click on the position you wish to load the sounds into on the right column and click "Insert". Or if you are replacing existing sounds, use "Overwrite".
6. When complete, click on the "Update Caller" button to save your changes. Any sounds being removed will automatically be backed-up.
7. Exit the utility and update your remote control as per the instructions in the next section.

## 6-3 Transferring a New Playlist to the TX35

Now that you are done programming your Cabela's Outfitter Series Electronic Predator Call, you are ready to download the new playlist to the TX35 transmitter. You will need to obtain a 3.5mm male-to-male stereo patch cable for this process.

1. Disconnect all accessories from the game call (i.e. speakers or decoy)
2. Turn off the power for both the game call and the TX35.
3. Connect the patch cable from the sound upload jack on the TX35 to the AUX jack on the game call.
4. Turn on the TX35
5. After powering on, the TX35 will display "TURN ON CALLER"
6. Turn on the game call.
7. The display on the TX35 will display "TRANSFERRING DATA". When it's done, the display will say "REMOVE CABLE HOLD SEND".

8. Unplug the cable from the TX35 first, followed by the main unit. Push and hold the power/send button on the TX35 for 2-3 seconds. The screen should briefly display “TRANSFER COMPLETE” and then your sound list will appear on the screen. Cycle through the list to view your changes.

## 7. Troubleshooting

This section will cover the troubleshooting aspects for the Cabela’s Outfitter Series Electronic Predator Call and TX35 remote control.

The most common problems are battery related. Before performing anything else, try installing fresh batteries. When your batteries get low, in either the Cabela’s Outfitter Series Electronic Predator Call or the TX35 remote, unexpected operation can occur. You can experience such things as loss of audio quality, loss of remote control range, and other abnormal results.

| <b>Problem</b>  | <b>Solution</b>   |
|---|---|
| Cabela’s Outfitter Series Electronic Predator Call will Not Turn On           | Make sure that you have fresh batteries installed. If you are using rechargeable batteries, make sure they are fully charged. Inspect your battery tray and make sure the springs are not compressed or corroded as this could lead to poor battery connectivity.                                     |
| Cabela’s Outfitter Series Electronic Predator Call does not produce any sound | Check that the speakers are not turned off. Check to see if you can play sounds manually (without the remote). If you cannot play sounds manually, connect the Cabela’s Outfitter Series Electronic Predator Call to a computer and inspect the sound files for missing files or signs of corruption. |
| Cannot transfer sound list to TX35  | This typically stems from an error in the play list on the Cabela’s Outfitter Series Electronic Predator Call. If you recently added new sounds, double-check the programming for errors such as duplicate or missing sound numbers.  |
| TX35 remote does not turn on  | Install a new 9V battery.   |
| Having trouble with programming new sounds                                    | Check out FOXPRO’s website for detailed programming information for your Cabela’s Outfitter Series Electronic Predator Call. Solutions for many common issues can be found there.   |
| Poor battery life in extreme cold weather conditions                          | Cold weather operations can take a serious toll on alkaline batteries. It is strongly recommended that you use lithium or rechargeable NiMH batteries to get the best performance in cold weather.  |

## 8. Maximizing Remote Range

Remote range can be affected by many factors. Some of these factors can be controlled while others cannot. In order to achieve the best possible remote range with your Cabela's Outfitter Series Electronic Predator Call digital game call system, it is recommended that the following points be observed:

- Always use high quality alkaline or lithium cell batteries in the remote.
- Always maintain clear line of sight between the remote control and the Cabela's Outfitter Series Electronic Predator Call. Any obstructions—no matter how significant or insignificant—can adversely affect the radio signal.
- Try to keep the remote control approximately six inches away from your body, gun barrel, and metal shooting sticks as these things can detune the remote control.
- Hold the remote control vertically rather than pointing it at the caller.
- Avoid using the device remotely when you are near power lines, cellular phone towers, and radar (such as near airports or military installations).
- Try to elevate the caller off of the ground by approximately three feet. This can greatly maximize your overall remote control range.
- Try to avoid situations where the Cabela's Outfitter Series Electronic Predator Call is placed at a lower elevation than the remote control—the caller should always be higher.
- If you are using the Cabela's Outfitter Series Electronic Predator Call remotely from a long distance, be sure to allow enough time for device reaction before sending multiple signals. For example, if you request a sound change, consider the amount of time from radio transmission from the remote to the Cabela's Outfitter Series Electronic Predator Call until that signal is turned into a change in operation that you are able to perceive. It will not always be instantaneous and may take a second or two before a change in operation is detected from your vantage point. Mashing down button after button can get the device into a state of confusion which could result in undesirable results.

## 9. FCC & IC Information

### FCC Information

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that the interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet or circuit different that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of this device. Modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment under FCC rules.

### **Industry Canada Notice**

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesirable operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicable aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

## 10. Warranty Statement

Your FOXPRO® game call is warranted to be free from defects in materials and workmanship that diminish its usefulness for a period 3 years from the date of purchase. Return the unit prepaid and packaged securely along with proof of purchase to the address shown below. Include a note describing the defect or problem. This limited warranty is void if the unit is physically damaged, used in a manner contrary to intended use, or otherwise abused, either intentionally or unintentionally. Also specifically excluded are batteries and damage caused by attempts to charge batteries not intended to be recharged, and water damage.

FOXPRO  
14 Fox Hollow Drive  
Lewistown, PA 17044

### Examples of Non-Warranty Issues

1. Product ceases to work after exposure to water (in the form of any precipitation), moisture, or other elemental forces.
2. Product is physically damaged from dropping, running over with any vehicle, falling from any surface and impacting with the ground, gunshot, misuse, neglect, abuse, animal attack.
3. Product ceases to work as a result of battery leakage, battery damage, intentional or unintentional wiring accidents, connecting an unapproved charging device to the product, overpowering, and incorrect installation of batteries.
4. Product ceases to work after connecting an unapproved external auxiliary device.

### Online Warranty Registration

You can register your Cabela's Outfitter Series Electronic Predator Call digital game call online at the following address:

<http://www.gofoxpro.com/warranty>

Make sure that you retain a hard copy of your proof of purchase (i.e. store receipt) for any future warranty claims.