

FOXPRO Model 532 Remote Addendum

This model contains 32 sounds arranged in two banks of 16 sounds each. Bank A or bank B is selected by the rear panel toggle switch labeled “A B”. The Bank A menu is located on one side of the unit while the Bank B menu is on the other side.

Remote Control Operation

Remote control operation is selected with the rear panel toggle switch labeled “L R”. The “L” position designates Local operation, while the “R” position selects Remote operation. With this switch in the L (local) position, sound selection is controlled by the rear panel 16 position rotary switch and the bank switch. Volume is controlled manually. With the Local-Remote switch in the “R” position, sound selection and volume is controlled by the TX-5 hand held transmitter. On the TX-5 there is a bank selector toggle switch located near the antenna. When this switch is in the forward position, bank A is selected, while bank B is chosen in the rear position. The 16 position pushwheel switch is labeled 0-15. A menu on the TX-5 shows which sounds correspond to these switch positions. The green push buttons control the mute, volume up and volume down functions. An LED on the top panel illuminates when a button is depressed. To select a different sound, first set the bank toggle switch and the pushwheel switch to the positions that correspond to the desired sound. When you are ready to change the sound, depress the “VOL UP” green button for about a half second. The sound will change to the new selection.

To change the volume, push and hold either the “VOL UP” or “VOL DN” buttons. It takes about 8 seconds to ramp the volume all the way up or down. To mute the sound, push and release the “MUTE” button. Do this again to unmute the sound.

Some notes on remote control operation...

1. When the caller is set to remote operation, the mute function is active; that is, there is no sound from the speaker. Push the mute button to allow the sound to play.
2. The volume control on the caller limits the maximum remote volume. Most users set the volume control all the way up, then control the loudness with the TX-5.
3. Remember to turn off the caller when you are finished using it. “MUTE” is not off. If you store the caller muted by the remote but with the volume control switch still on, you will drain the batteries.
4. Maximum range occurs when both antennas are vertical. Elevating the caller by setting it on a stump, a large rock, or by hanging it from a tree limb can also increase range.
5. Be careful not to break the TX-5 antenna. This can occur if you sit down with the transmitter is in your pants pocket. It is better to carry the TX-5 in a shirt or coat pocket, or to unscrew and remove the antenna.
6. The caller remembers the remote volume setting when it is turned off. The volume will default to this level the next time the remote function is used.